

F00VX40023

F00VX40023 Injector Nozzle Technical File G1X9F00VX40023 G1Z17F00VX40023





F00VX40023 Injector Nozzle Technical File

Content

	(f)	5	7 and 6	3	3 activ	7	7	N 40%	. No. 1975	J	3 455	4
1, F00V	VX40023	Injector	Nozzle In	ntroductio Iozzle's B	on							3
1.3	1. F00VX	40023 Iı	njector N	lozzle's B	asic Info	mation .		GP 1	Chri		-0-7	3
											d	3
											200	
											S	
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Ç FOOVA	40023 II	ijector ivi	ozzie Qua	anty Com			1	4.50	4.000	- 10 ¹⁰	o
											gjip ^{ji}	
1.5	8. F00VX	₹40023	njector N	lozzle's W	Varranty	Instruction	ons	J	اتوپيرلا	يَنوبير	S	I 4
90° 1.9	9. F00VX	۲40023 ۱	njector N	lozzle's N	/lanufact	urer	- 5	53				5
2. F00\	VX40023	Injector	Nozzle's	Technica	I Support	t						5
2≓	1 FOOVS	740023±	niector N	lozzle's In	stallatio	n Precaut	tions -	1	S 54	9	1 20	§ 5
30 Color	2 : FOOVS	740023 I	niector N	lozzle Ins	nection	CHANGE TO SERVICE STREET	CO. (1) (1) (1)	50/10/00	c20500	200	200	- 5
2.5	2.;100V1 2. ENNV	740023 I	nioctor N	lozzlo Toc	t Moscu	romont						6
⊢ ک	J. POOVA	140023 I 140023 I	ijector iv	10221E 1E3	t ivicasu	1	1	i e	i .a	i	Š	0
۱۳ <u>۳۰</u> ۲ کالیالی	4. FUUV <i>I</i>	1400234	njector N	iozzie s ir	istaliatio	nggv.					1	b
			-		_							
2.0	6. F00V	(400231	njector N	lozzle List	t of Tools	Used Du	iring Mea	suremer	nt and In	stallation		8
2.	7. F00VX	₹400231	njector N	lozzle Caι	uses of D	amage			.i		i gari	8
2.8	8. F00VX	(40023 I	njector N	lozzle Ted	chnical S	upport C	Obtaining	Method	s			9
3. F00	VX40023	3 Injector	Nozzle's	Purchase	e and De	livery	······		<u>.</u>	<u></u>		9
3.:	1. F00V	۲40023 آ	njector N	lozzle's P	urchase	Payment	t Method	s			``	9
- Table 1			43/94	A 10 (10 PM)	4 39 C. L.	c NAarkat	2000	Billy.	800,000	800,000	89 ₆₀₀	9
3.2	2. F00V	(40023 I	niector N	lozzle's N	riain Saie	s iviai ket.						
3.7	1. F00VX 2. F00VX	(40023 I (40023 I	njector N niector N	lozzle's N Iozzle's D	ilain Saie Jeclaratio	s Market on Requi	rements					. 9
3	2. F00VX 3. F00VX	(40023 (40023 (40023	njector N njector N	lozzle's N lozzle's D	iain Sale eclaration hipping V	on Requi	rements					9 a
3 3 3	2. F00VX 3. F00VX 4. F00VX	(40023 (40023 (40023	njector N njector N njector N	lozzle's M lozzle's D lozzle's Sl	riain Saie reclaration hipping \	on Requi Ways	rements	singstick			``	9 9 9
3.4 3.4 3.1	3. F00V) 4. F00V) 5. F00V)	(40023 (40023 (40023	njector N njector N njector N	lozzle's D lozzle's Sl lozzle's Le	eclaration hipping \ ead Time	on Requi Vays	rements	97 J.		37,500		9 9 9
3.4 3.4 3.4 3.6	3. F00V) 4. F00V) 5. F00V) 6. F00V)	K40023 K40023 K40023 K40023	njector N njector N njector N njector N	lozzle's D lozzle's Sl lozzle's Le lozzle's L	eclaration hipping \ ead Time ogistics	on Requi Vays Time for	rements Destinat	ion Out (of China	s Areas .		9 9 9
3.3 3.4 3.4 3.6	3. F00V) 4. F00V) 5. F00V) 6. F00V) 7. F00V)	(40023 (40023 (40023 (40023 (40023	njector N njector N njector N njector N njector N	lozzle's D lozzle's Sl lozzle's Le lozzle's L lozzle's P	eclaration hipping \ hipping \ ead Time hipping \ ogistics hipping \ hipping	on Requi	rements Destinat	ion Out o	of China	's Areas .		9 9 9 9
3 3 3 3 4. F00V	3. F00V) 4. F00V) 5. F00V) 6. F00V) 7. F00V) VX40023	(40023 (40023 (40023 (40023 (40023 Injector	njector N njector N njector N njector N njector N Nozzle's	lozzle's D lozzle's Sl lozzle's Le lozzle's L lozzle's Pa Storage S	eclaration hipping \ hipping \ ead Time ogistics acking Standard	on Requi	rements Destinat	ion Out (of China	's Areas .		9 9 9 10 11
3 3 3 3 4. F00V	3. F00V) 4. F00V) 5. F00V) 6. F00V) 7. F00V) VX40023	(40023 (40023 (40023 (40023 (40023 Injector	njector N njector N njector N njector N njector N Nozzle's	lozzle's D lozzle's Sl lozzle's Le lozzle's L lozzle's Pa Storage S	eclaration hipping \ hipping \ ead Time ogistics acking Standard	on Requi	rements Destinat	ion Out (of China	's Areas .		9 9 9 10 11
3 3 3 3 4. F00V	3. F00V) 4. F00V) 5. F00V) 6. F00V) 7. F00V) VX40023	(40023 (40023 (40023 (40023 (40023 Injector	njector N njector N njector N njector N njector N Nozzle's	lozzle's D lozzle's Sl lozzle's Le lozzle's L lozzle's Pa Storage S	eclaration hipping \ hipping \ ead Time ogistics acking Standard	on Requi	rements Destinat	ion Out (of China	's Areas .		9 9 9 10 11
3 3 3 3 4. F00V 5.Comp	3. F00V) 4. F00V) 5. F00V) 6. F00V) 7. F00V) VX40023 pany Info	\$40023 \$40023 \$40023 \$40023 \$40023 Injector rmation	njector N njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's Sl lozzle's Le lozzle's L lozzle's P Storage S	eclaration hipping \ hipping \ head Time ogistics acking Standard	on Requi	Destinat	ion Out (of China	's Areas .		9 9 9 10 11 12
3.3 3.4 3.6 4. F00V 5.Comp 5.3	3. F00V2 4. F00V2 5. F00V2 6. F00V2 7. F00V2 VX40023 Dany Info 1. Compa 2. Sales-n	\$40023 \$40023 \$40023 \$40023 \$40023 Injector rmation any Intro nen's Cor	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's Sl lozzle's Le lozzle's Le lozzle's P Storage S 	hipping \ hipping \ ead Time ogistics acking Standard	on Requi	Destinat	ion Out o	of China	's Areas .		9 9 9 10 11 12 12
3.3 3.4 3.6 4. F00V 5.Comp 5.3	3. F00V2 4. F00V2 5. F00V2 6. F00V2 7. F00V2 VX40023 Dany Info 1. Compa 2. Sales-n	\$40023 \$40023 \$40023 \$40023 \$40023 Injector rmation any Intro nen's Cor	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's Sl lozzle's Le lozzle's Le lozzle's P Storage S 	hipping \ hipping \ ead Time ogistics acking Standard	on Requi	Destinat	ion Out o	of China	's Areas .		9 9 9 10 11 12 12
3.3 3.4 3.4. F00V 5.Comp 5.2 6. Copp	3. FOOVY 4. FOOVY 5. FOOVY 6. FOOVY 7. FOOVY VX40023 Dany Info 1. Compa 2. Sales-n yright Sta	\$40023 \$40023 \$40023 \$40023 \$40023 Injector rmation any Intro nen's Cor	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's Sl lozzle's Le lozzle's Le lozzle's P Storage S 	hipping \ hipping \ ead Time ogistics acking Standard	on Requi	Destinat	ion Out o	of China	's Areas .		9 9 9 10 11 12 12
3.3 3.4 3.4. F00V 5.Comp 5.2 6. Copp	3. FOOVY 4. FOOVY 5. FOOVY 6. FOOVY 7. FOOVY VX40023 Dany Info 1. Compa 2. Sales-n yright Sta	(40023 I (40023 I (40023 I (40023 I (40023 I Injector rmation any Intro nen's Cor	njector N njector N njector N njector N Nozzle's duction . ntact Info	lozzle's D lozzle's Sl lozzle's Le lozzle's L lozzle's P Storage S rmation.	hipping \ hipping \ ead Time ogistics acking Standard	on Requi	Destinat	ion Out o	of China	s Areas .		9 9 9 10 11 12 12 13
3.3 3.4 3.4. F00V 5.Comp 5.2 6. Copp	3. FOOVY 4. FOOVY 5. FOOVY 6. FOOVY 7. FOOVY VX40023 Dany Info 1. Compa 2. Sales-n yright Sta	(40023 I (40023 I (40023 I (40023 I (40023 I Injector rmation any Intro nen's Cor	njector N njector N njector N njector N Nozzle's duction . ntact Info	lozzle's D lozzle's Sl lozzle's Le lozzle's L lozzle's P Storage S rmation.	hipping \ hipping \ ead Time ogistics acking Standard	on Requi	Destinat	ion Out o	of China	s Areas .		9 9 9 10 11 12 12 13
3.3 3.4 4. F00V 5.Comp 5.2 6. Cop	3. FOOVY 4. FOOVY 5. FOOVY 6. FOOVY 7. FOOVY VX40023 pany Info 1. Compa 2. Sales-n yright Sta	(40023 I (40023 I (40023 I (40023 I (40023 I Injector rmation any Intro nen's Cor	njector N njector N njector N njector N Nozzle's duction . ntact Info	lozzle's D lozzle's Sl lozzle's Le lozzle's L lozzle's P Storage S rmation.	hipping \ hipping \ ead Time ogistics acking Standard	on Requi	Destinat	ion Out o	of China	's Areas .		9 9 9 10 12 12 13
3.3 3.4 4. F00V 5.Comp 5.2 6. Cop	3. FOOVY 4. FOOVY 5. FOOVY 6. FOOVY 7. FOOVY VX40023 pany Info 1. Compa 2. Sales-n yright Sta	(40023 440	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's Sl lozzle's Le lozzle's Le lozzle's P Storage S rmation	hipping \ hipping \ ead Time ogistics acking Standard	on Requi	Destinat	ion Out	of China	's Areas .		9 9 9 10 12 12 13
3.3 3.4 4. F00V 5.Comp 5.2 6. Cop	3. FOOVY 4. FOOVY 5. FOOVY 6. FOOVY 7. FOOVY VX40023 pany Info 1. Compa 2. Sales-n yright Sta	(40023 440	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's Sl lozzle's Le lozzle's Le lozzle's P Storage S rmation	hipping \ hipping \ ead Time ogistics acking Standard	on Requi	Destinat	ion Out	of China	's Areas .		9 9 9 10 12 12 13
3.3 3.4 4. F00V 5.Comp 5.2 6. Cop	3. FOOVY 4. FOOVY 5. FOOVY 6. FOOVY 7. FOOVY VX40023 pany Info 1. Compa 2. Sales-n yright Sta	(40023 440	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's Sl lozzle's Le lozzle's Le lozzle's P Storage S rmation	hipping \ hipping \ ead Time ogistics acking Standard	on Requi	Destinat	ion Out	of China	's Areas .		9 9 9 10 12 12 13
3.3 3.4. F00V 5.Comp 5.2 6. Cop	3. F00V2 4. F00V2 5. F00V2 6. F00V2 7. F00V2 VX40023 pany Info 1. Compa 2. Sales-n yright Sta	(40023 I (40023 I (40023 I (40023 I (40023 I Injector rmation any Intro nen's Cor Intement	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's SI lozzle's Le lozzle's L lozzle's P Storage S rmation.	hipping \ hipping \ ead Time ogistics acking Standard	on Requi	Destinat	ion Out	of China	s Areas .		9 9 9 10 11 12 12
3.3 3.4. F00V 5.Comp 5.2 6. Cop	3. F00V2 4. F00V2 5. F00V2 6. F00V2 7. F00V2 VX40023 pany Info 1. Compa 2. Sales-n yright Sta	(40023 I (40023 I (40023 I (40023 I (40023 I Injector rmation any Intro nen's Cor Intement	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's SI lozzle's Le lozzle's L lozzle's P Storage S rmation.	hipping \ hipping \ ead Time ogistics acking Standard	on Requi	Destinat	ion Out	of China	s Areas .		9 9 9 10 11 12 12 13
3.3 3.4. F00V 5.Comp 5.2 6. Cop	3. F00V2 4. F00V2 5. F00V2 6. F00V2 7. F00V2 VX40023 pany Info 1. Compa 2. Sales-n yright Sta	(40023 I (40023 I (40023 I (40023 I (40023 I Injector rmation any Intro nen's Cor Intement	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's SI lozzle's Le lozzle's L lozzle's P Storage S rmation.	hipping \ hipping \ ead Time ogistics acking Standard	on Requi	Destinat	ion Out	of China	s Areas .		9 9 9 10 11 12 12 13
3.3 3.4 3.5 4. F00V 5.Comp 5.7 6. Copp	3. F00V2 4. F00V2 5. F00V2 6. F00V2 7. F00V2 VX40023 cany Info 1. Compa 2. Sales-n yright Sta	(40023 I (40023 I (40023 I (40023 I (40023 I Injector rmation any Intro nen's Cor etement	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's SI lozzle's Le lozzle's Le lozzle's P Storage S rmation	eclaration hipping Vead Time ogistics acking	on Requi	Destinat	ion Out	of China	s Areas .		9 9 11 12 12 12
3.3 3.4 3.5 4. F00V 5.Comp 5.7 6. Copp	3. F00V2 4. F00V2 5. F00V2 6. F00V2 7. F00V2 VX40023 cany Info 1. Compa 2. Sales-n yright Sta	(40023 I (40023 I (40023 I (40023 I (40023 I Injector rmation any Intro nen's Cor etement	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's SI lozzle's Le lozzle's Le lozzle's P Storage S rmation	eclaration hipping Vead Time ogistics acking	on Requi	Destinat	ion Out	of China	s Areas .		9 9 11 12 12 12
3.3 3.4 3.5 4. F00V 5.Comp 5.7 6. Copp	3. F00V2 4. F00V2 5. F00V2 6. F00V2 7. F00V2 VX40023 cany Info 1. Compa 2. Sales-n yright Sta	(40023 I (40023 I (40023 I (40023 I (40023 I Injector rmation any Intro nen's Cor etement	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's SI lozzle's Le lozzle's Le lozzle's P Storage S rmation	eclaration hipping Vead Time ogistics acking	on Requi	Destinat	ion Out	of China	s Areas .		9 9 11 12 12 12
3.3 3.4 3.5 4. F00V 5.Comp 5.7 6. Copp	3. F00V2 4. F00V2 5. F00V2 6. F00V2 7. F00V2 VX40023 cany Info 1. Compa 2. Sales-n yright Sta	(40023 I (40023 I (40023 I (40023 I (40023 I Injector rmation any Intro nen's Cor etement	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's SI lozzle's Le lozzle's Le lozzle's P Storage S rmation	eclaration hipping Vead Time ogistics acking	on Requi	Destinat	ion Out	of China	s Areas .		9 9 9 11 12 12 13
3.3 3.4 3.5 4. F00V 5.Comp 5.7 6. Copp	3. F00V2 4. F00V2 5. F00V2 6. F00V2 7. F00V2 VX40023 cany Info 1. Compa 2. Sales-n yright Sta	(40023 I (40023 I (40023 I (40023 I (40023 I Injector rmation any Intro nen's Cor otement	njector N njector N njector N njector N Nozzle's duction .	lozzle's D lozzle's SI lozzle's Le lozzle's Le lozzle's P Storage S rmation	hipping \ hippin	on Requi	Destinat	ion Out o	of China	s Areas .		9 9 9 11 12 12 13

Mob/Whatsapp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com



F00VX40023 Injector Nozzle Technical File

1. F00VX40023 Injector Nozzle Introduction

1.1. F00VX40023 Injector Nozzle's Basic Information

SALUTATION SALUTITIES	China Made New Common Rail Injector Nozzle F00VX40023	Brand
SKU1	G1X9F00VX40023	XINGMA
SKU2	G1Z17F00VX40023	LIWEI

1.2. F00VX40023 Injector Nozzle's Common Written Part Number

Injector Nozzle Order Number	Injector Nozzle Engraved Number
/	F00VX40023

1.3. F00VX40023 Injector Nozzle's Application Information for Injectors

(1) F00VX40023 Injector Nozzle Part Number Common Writing

F00VX40023,F 00V X40 023,F00V X40 023,F00VX40 023,F00VX40023,F 00V X40023,F 00VX40023,F 00VX40 023,F00V X40023

1.4. F00VX40023 Injector Nozzle's Specifications and Dimensions Parameters

Injector_Nozzle Size: 6 cm*1.5cm *1.5 cm

Injector Nozzle Barrel Dimensions: 7 cm *2 cm *2 cm

Single Injector Nozzle Weight: 0.03kg

Injector Nozzle 10 PCS Per Box: 10 cm *8 cm *4cm Injector Nozzle Weight 10 PCS Per Box: 0.3kg

Injector Nozzle Quality: China Made New Injector Nozzle

Injector Nozzle MOQ: 10 PCS

1.5. F00VX40023 Injector Nozzle Quality Control

(1) Injector Nozzle Testing

All parts of the injector nozzle are subjected to precision testing, high temperature testing, low temperature testing, withstand pressure testing, leakage testing, durability testing, and various working conditions testing.

(2) Injector Nozzle Inspection

The factory inspection of the injector nozzle is undergone full inspection, random inspection, and batch inspection three inspections. Different brands of test benches are used to test the same injector nozzle for a total of no less than three times for factory inspection, and the fuel injector installation testing environment are progressed in dust-free workshop.

(3) Injector Nozzle Installation

When matching the valve cap and valve steam, Shumatt strictly complies with the standard of valve cap and valve stem clearance technical indicators to ensure that each valve assembly meets the factory standards and use standards.

1.6. F00VX40023 Injector Nozzle's Customized Service

(1) Injector Nozzle's Customized Service: Meet the customized needs of OEM manufacturers for shell lettering (logo, nozzle part number, date and series number), nozzle without lettering, nozzle tube, nozzle box customized etc.

THE THE THE THE THE THE THE THE

Mob/Whatsapp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com



36 36	Ø DULA 18	T SHAMET		Hanne L.		91g; 91g;
SERVICE SERVICE	njector Nozzle Shell Lettering Content Customized	Injector	Nozzle Without le Customized	ttering	Injector Nozzle Tuk Customized	pe -
58 ^{6,55}	共轨喷油嘴 Common Rell Injector Nozzle	SHOWIT SHOUL	SANTAL SANTA	SWINE C	Shirts Shilling	ALL SHE
\$1 ^{0,0}	### \$P\$7 ※思致動 ② ※思致動	IL SHOWLL SHOW	SAN TOWNS SHARE	SA SHAME LE	STATE SPECIAL SPECIA	PALL.
lr آئران	njector Nozzle Packaging Box Customized	TT STATE SHAPE				print.

(2) Injector Nozzle's Customized Service Quantity Requirements:

The purchased of Customized injector nozzle's shell lettering or without lettering are no less than 100 pieces. The purchased of Customized injector nozzle tubes are no less than 2000-3000 pieces.

The purchased of customized injector nozzle boxes are no less than 1000 pieces.

Customized products involve the need of specify logo, the OEM manufacturer needs to provide trademark authorization and the sample of logo image file. Children.

▲ Once the customized injector nozzle is sold, it can't be returned or exchanged if there is no quality

1.7. F00VX40023 Injector Nozzle's Packing List

(1) Injector Nozzle's Spare Parts List

No.		1			2			3		
ale ale	905 ⁵ C ¹	May Ma	35042	st ⁴	- 4	10,5	Section 18	共 轫 Common Rail	1喷油嘴 Injector Nozz ie	est _e
Image	MAN L		358477	\$1 ⁶	T	_ç a,27	S. S	兴马共航	の終方面。 数学大下 ② 大平洋学院 の大平洋学院	218°
Name	زولي أأثاثت	ector Nozzle			Nozzle Tube	erit. Land	98 ¹⁷	Injector No	zzle Box	ATT LOS
Description	-	lozzle Part N 00VX40023	umber		nt Nozzle Rustin aging from Coll	_	381	10 PCS	/Box	24.

Minors are prohibited to use fuel injector nozzle assembly, nozzle packing box to avoid injury.



Injector nozzle box is recyclable and can be reused.

 $oldsymbol{oldsymbol{oldsymbol{oldsymbol{A}}}$ Injector nozzle barrels is non-degradable material, please dispose of it properly after us

1.8. F00VX40023 Injector Nozzle's Warranty Instructions

(1) . Injector Nozzle's Warranty Conditions and Instructions

It is necessary to provide pictures, videos, or test reports detected by the injector nozzle inspection equipment when the injector nozzle is abnormal during use as evidence to feed back to the salesman.

Abnormal conditions are properly explained such as: 1. Smoke, 2. Engine shake, 3. Difficulty starting the engine, 4. Engine noise, 5, oil leakage etc.

Mob/Whatsapp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 深圳市舒马特科技有限公司

Website: www.shumatt.com



(2) . Injector Nozzle Warranty Coverage

Within 15 days after customer receives the F00VX40023 injector nozzle if there is a performance failure and the product has no appearance damage, customer can choose to replace it or repair it;

If the F00VX40023 injector nozzle has performance problems during the warranty period (6-12 months), and it is confirmed that it is product's problems after testing, you can contact our salesmen to replace the same model or a reworked product with the same performance for free;

If the injector house has obvious scratches, it can only be repaired and it will be returned as it is if the product is confirmed to be fault-free.

(3) . Injector Nozzle Out of Warranty Coverage

The warranty period has expired.

Injector nozzle failure caused by high temperature, high pressure, humidity, rain and snow, saline-alkali land, earthquake, and used in abnormal environment.

Injector nozzle damage caused by man-made reasons (throwing, strong magnetic field magnetization, set fire).

Injector nozzle failure or injector damage caused by non-injector design, technology, manufacturing, quality and other issues.

Injector nozzle failure due to system pressure exceeding system approved pressure.

Injector nozzle failure caused by system voltage exceeding approved voltage.

Injector nozzle failure caused by impurities (water, lead, aluminum powder, iron powder, sulfide) in the system fuel exceeding the standard requirements.

Injector nozzle failure caused by not installing according to the tightening torque specified in the vehicle engine maintenance manual (the tightening torque is too large or too small).

Injector nozzle failure caused by not following the installation angle specified in the injector maintenance manual.

Injector nozzle failure caused by not following the cleaning requirements specified in the injector maintenance maintenance manual.

Injector nozzle failure caused by failure to replace consumable parts as specified in the injector maintenance manual.

1.9. F00VX40023 Injector Nozzle's Manufacturer

Injector nozzle's manufacturer: Shenzhen Shumatt Technology Co., Ltd

2. F00VX40023 Injector Nozzle's Technical Support

2.1. F00VX40023 Injector Nozzle's Installation Precautions

 
- Clean the injector nozzle in an ultrasonic cleaner for 3-5 minutes before installation, so as to make the stains, dust, rust-proof oil oxides, paraffin base, naphthenic base, intermediate base, salt, lead naphthenate, zinc naphthenate, sodium petroleum sulfonate, barium petroleum sulfonate, calcium petroleum sulfonate, tallow diamine trioleate, rosinamine on the surface of the injector nozzle fall off.
- (2) Use compressed air to clean the cleaning fluid attached to the surface of the injector nozzle after cleaning, and clean it up to the standard of use.

2.2. F00VX40023 Injector Nozzle Inspection.


(1) Check whether there is deformation, cracking, thread damage, quenching, leakage and rust in the guide sleeve, spring, gasket and tight cap of the nozzle. The tight cap of the nozzle must be replaced after being disassembled for more than 5 times, as shown in the following.

Mob/Whatsapp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>





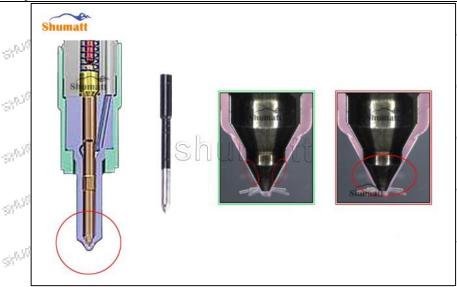

- (2) Replace the tight cap of the nozzle and the copper gasket of the injector nozzle
- (3) Check whether the gap between the nozzle needle and the nozzle shell is within the standard range and whether it reaches the standard for use

All parts should be examined for wear under a microscope at least 20 times larger

Nozzle tight cap deformation, cracking, thread damage, quenching, leakage, will lead to black smoke vehicle cap, fuel injector damage.

lacklacklack Injector opening pressure greater than or less than the specified range may cause injector damage.

Failure to replace wearing parts in time during maintenance may lead to fuel injector damage.

2.3. F00VX40023 Injector Nozzle Test Measurement

(1) Nozzle opening pressure test

Test whether the opening pressure range of the nozzle is within the range specified in the injector maintenance manual (to be verified), if not within the normal range, adjust the nozzle spring to adjust the gasket

If the value is greater than normal, reduce the oil nozzle spring adjusting gasket; if the value is less than normal, increase the oil nozzle spring adjusting gasket.

(2) Stroke Measurement of Nozzle Needle Valve

Use a measuring tool to measure whether the stroke of the nozzle needle valve is within the range (15-45um) specified in the injector maintenance manual. If not, adjust the stroke of the nozzle to adjust the gasket.



If the value is greater than normal, thicken the gasket for oil-nozzle needle valve lift adjustment; if the value is less than normal, reduce the gasket for oil-nozzle needle valve lift adjustment

2.4. F00VX40023 Injector Nozzle's Installation

(1) Tightening torque of injector nozzle

The torque lever and tightening moment specified in the injector maintenance manual must be installed when the injector nozzle is installed. (50Nm)

Mob/Whatsapp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 深圳市舒马特科技有限公司

Website : www.shumatt.com





The tightening torque of the nozzle cap must be installed in accordance with the tightening torque specified in the injector maintenance manual

2.5. F00VX40023 Injector Nozzle Testing After Maintenance

(1) After installation, it needs to be tested on the test bench.



A

The correct injector type should be selected for testing

(2) . The test results need to be ensured that the following items are within the standard data range of the test stand.

LEAK TEST: Test whether sealing test is up to standard or not

In this step, no injector collector should be installed at the nozzle during the test so as to observe whether the nozzle is dripping oil, meanwhile observe that all joints are no oil leaking.

The static oil return of the test should not exceed 8mm2/H, otherwise, you need to check whether the high-pressure sealing ring, valve assembly, and stroke parameters of the injector are within the standard range.

VL: Test whether full load oil (main injection, high speed) is up to standard or not

This step needs to be combined with vehicle driving conditions, such as power, fuel consumption and smoke as well as the maintenance of the engine, if there is situation of insufficient power, fuel consumption is high, thick black smoke and irregularly maintenance of the engine, the engine needs to be maintained according to the maintenance handbook at very first time.

Each of injector part needs to be adjusted and checked if there is any damage according to above situations to ensure the injector is normal. After make sure the injector works normal, you need to reduce the armature stroke if too much oil injection, and increase the armature stroke if too little oil injection.

The error of each injector should be controlled in 6mm3/HH when adjusting.

TL\EM: Test whether the torque point, emission point, exhaust limit, fuel supply reach standard or not Through this test, it is detected that when the oil injection is too little, the engine's acceleration is slow, vice versa, when the oil injection is too much, the engine's acceleration will produce black smoke and the engine excessive exhaust emissions.

Injector nozzle spring force gasket, armature stroke, lift gasket and solenoid valve spring force gasket determine whether exhaust restriction and injector fuel supply reach standard

LL: Test if the idle fuel supply reaches the standard

This test detects oil injection is too much will cause engine idle smoke, otherwise if the oil injection too little will cause engine idling easy to stall, or difficult to start.

in The uneven of oil injection causes the unstable rotation speed of engine, making noise, and increase

Mob/Whatsapp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 深圳市舒马特科技有限公司

Website : www.shumatt.com



the engine swing in the acceleration process.

Each injector error should be controlled within 2mm3/HH when adjusting.

يبين Idle speed fuel supply quantity mainly by adjusting the nozzle spring force gasket.

VE: Test whether the pre-injection meets the standard

This test detects when oil injection is too much will cause cylinder knocking while the engine is working and the exhaust emissions is not up to standard (smoke).

While when oil injection is too little will cause big noise while the engine is working, the engine is difficult to start, the engine weak acceleration, slow response of injector.

Each injector error should be controlled within 0.5mm3/HH when adjusting.

2.6. F00VX40023 Injector Nozzle List of Tools Used During Measurement and Installation

Image	shumin in shumin	Tools ose would be a sure in the sure in t	shumatt
SKŪ	CRT084	CRT220	CRT079
Description	Torque wrench: 19-110nm 1/2 It is used to control tightening force and angle during	Fuel injector stroke measuring tool: is used to measure buffer stroke of fuel injector,	Micrometer: is used to measure gasket thickness
AND PROPERTY.	installation	armature stroke and remaining air gap	AND ST. CHEST AND ST.
Image			
SKU S		CRT281	Wallet Bellet Bellet Be
Description	Ultrasonic cleaning machine: is used for cleaning fuel injector and parts	Common rail injector test bench: check the injector working condition	

2.7. F00VX40023 Injector Nozzle Causes of Damage

- (1) Fuel injector nozzle failure caused by impurities (water, lead, aluminum powder, iron powder, sulfide) in fuel exceeding standard requirements.
- (2) The nozzle is normally worn due to long time working under high temperature
- (3) Nozzle needle wear leads to oil hole blockage, insufficient fuel injection injector cannot work properly.

A Nozzle needle wear leads to oil hole blockage, insufficient fuel injection injector can't work properly.

The wear of the nozzle leads to the increase of fuel quantity, resulting in black smoke of the vehicle, and the fuel injector can't work properly when it is serious.

▲ If the nozzle needle can't move smoothly stuck may cause serious damage to the injector nozzle

The rusting of the nozzle spring leads to spring fracture and black smoke from the vehicle.

The opening pressure of the nozzle decreases, and the oil quantity of the injector increases, leading to black smoke of the vehicle, and the injector can't work properly when it is serious.

Oil-nozzle needle valve lift adjustment gasket wear oil-nozzle needle valve stroke becomes larger, the fuel injector oil quantity becomes larger, resulting in black smoke of vehicles, resulting in the fuel injector can't work properly when serious.

▲The cracking of the nozzle cap is caused by high intensity work under high temperature.

Mob/Whatsapp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>



2.8. F00VX40023 Injector Nozzle Technical Support Obtaining Methods

- (1) Injector Nozzle Technical File, visit http://shumatt.com to get the technical file
- (2) Injector Technical Videos

Facebook: Visit https://www.facebook.com/hison.li constantly follow can get more information.

YouTube: Visit https://www.youtube.com/channel/UCByvYBx7VjV mAfxh https://www.youtube.com/channel/UCByvYBx7VjV matyred <a href="https://www.youtube.com/channel/UCByvY

Shumatt: Visit http://shumatt.com to get the technical videos.

(3) Injector Nozzle Information Query Software

TruckBook Parts EPC APP, Android/Apple App Store download and install, visit http://shumatt.com to get the download and installation tutorial

(4) Search The injector nozzle test data through TruckBook Parts EPC APP.

3. F00VX40023 Injector Nozzle's Purchase and Delivery.

3.1. F00VX40023 Injector Nozzle's Purchase Payment Methods

Payment Methods: T/T, PayPal, Alipay, WeChat

500

Please contact our salesmen for specific payment information.

3.2. F00VX40023 Injector Nozzle's Main Sales Market.

Injector Nozzle's main sales markets: Asia, Europe, North America, South America, Africa etc.

3.3. F00VX40023 Injector Nozzle's Declaration Requirements

Shumatt can assist customers to provide the following documents for import customs clearance: contract, invoice, packing list, bill of lading, insurance policy, certificate of origin, etc.

3.4. F00VX40023 Injector Nozzle's Shipping Ways

Destination in China areas: SF Express, Debon Express, the corresponding logistics company can be provided according to customer requirements in special cases.

Destinations out of China's areas: DHL, UPS, FedEx, TNT air, ocean or other shipping methods required by customers.

3.5. F00VX40023 Injector Nozzle's Lead Time

Lead time: Send out within 3-7 working days after receiving payment (Except for special products and special cases).

3.6. F00VX40023 Injector Nozzle's Logistics Time for Destination Out of China's Areas

Country or Region of Departure	Hong Kong, China	Other Countries or Regions of Asia	Australia and New Zealand	Europe	America	Other Countries
China's Mainland	7 Days	7 Days	8 Days	8 Days	8-12 Days	7-10 Days

Mob/Whatsapp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>



UPS Logistics Time: Country or Region of Departure: China's Mainland

Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time
Japan	3 Days	UK	5-7 Days	Egypt	5-7 Days
Turkey	5-7 Days	Singapore	3 Days	Switzerland	5-7 Days
Bahrain	5-7 Days	Latvia	7-10 Days	New Zealand	7-10 Days
Sri Lanka	5-7 Days	Thailand	3 Days	Austria	5-7 Days
Romania	5-7 Days	Vietnam	3-5 Days	Estonia	5-7 Days
Malaysia	3-5 Days	Israel	5-7 Days	Mexico	7-10 Days
France	5-7 Days	America	5-7 Days	United Arab Emirates	5-7 Days
Italy	5-7 Days	Netherlands	5-7 Days	Bengal	7-10 Days
Lebanon	5-7 Days	Philippine	3-5 Days	Greece	7-10 Days
South Korea	3 Days	Spain	5-7 Days	Myanmar	5-7 Days
Canada	5-7 Days	Germany	5-7 Days	Saudi Arabia	7-10 Days
Portugal	5-7 Days	Australia	5-7 Days	South Africa	7-10 Days
Denmark	5-7 Days	Belgium	5-7 Days	Ukraine	7-10 Days
India	7-10 Days	Qatar	7-10 Days	Poland	5-7 Days
Indonesia	3-5 Days	Morocco	7-10 Days	Pakistan	7-10 Days
Kuwait	7-10 Days	0. 0. 0		01 01	01

The logistics time is for reference only, subjects are according to the actual arrival.

3.7. F00VX40023 Injector Nozzle's Packing

Domestic express packaging: Usually wrapped in waterproof scotch tape, such as picture No.2.

International express packaging: Wrapped with waterproof yellow tape After wrapping the black protective film, such as picture No. 3.

Pallet Shipping: Use fumigation free and recycling trays that meet export requirements, and use white wrapping protective film to wrap and bind with cable ties for the outside, such as picture No. 4, Also, the products can be packaged according to customers' requirements.


The packing tray is made of plastic and can be recycled.

Transparent tape, yellow tape, black wrapping protective film, white wrapping protective film are non-degradable materials, please dispose of them properly.

A Minors are prohibited from using transparent tape, yellow tape, black wrapping protective film, and white wrapping protective film to avoid personal injury.



Pic No.2 Domestic express packaging:

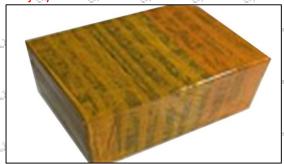

Website: www.shumatt.com

International express packaging:

Mob/Whatsapp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com



Wrapped by Transparent tape



Wrapped with yellow tape after wrapping black protective film

Pic No.4

Pallet Shipping: Use pallet that meet export requirements, and use white wrapping protective film to wrap and bind with cable ties

4. F00VX40023 Injector Nozzle's Storage Standard

(1) Choose a suitable storage place

The warehouse and cargo yard where the injector nozzles are stored should be kept clean and dry, and away from the factory buildings that generate harmful gases and dust; do not mix with acid, alkali, salt and other substances; the storage place should have a good drainage system; the cargo yard should be flattened with gravel or furnace ash etc. to enhance the water permeability of the surface layer to keep the reservoir area dry.

(2) Strict requirements of warehousing

Strict inspections should be carried out when the injector nozzles are put into storage, the surface cleaning work should be done well to remove water traces, oil stains, ash and other dirt, remove the rust and do anti-rust treatment in time. Packaged nozzles must be protected from damage.

(3) Keep the warehouse dry and preventing moisture

The relative humidity is usually below 70% for the injector nozzles placed in the room, and the corrosion of the injector nozzles is significantly reduced.

Injector nozzles must be stored in the warehouse, and they are forbidden to store in the same warehouse with commodities with high water content.

(4) Stack Properly

After the injector nozzle is exposed to rain, the corrosion rate will increase significantly. The purpose of sealing is to isolate the injector from rainwater and humid air, so the warehouse window should be checked in time to avoid rainwater entering the warehouse

If the injector nozzle package is damaged, it should be repaired or replaced; when the package is damp, the packaging material should be dried; if the original anti-corrosion and oil applied at the factory is found to be damaged or dried up, it should be cleaned and re-applied oil in time.

242It is forbidden to leave the injector nozzle exposed in the air for a long time.

☑▲☑It is forbidden to store acid, alkali, salt and other substances together with the injector nozzle.

أأنظرهم أأكلوهم أأكلوهم أأكلوهم أكالكوم أأنكوهم أأنكوهم أأنكوهم أأناوهم أأكلوهم أكالوهم أأكلوهم

The unpacked diesel injector nozzle must be rust-proof during secondary storage.

Mob/Whatsapp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com © 2022 深圳市舒马特科技有限公司





5.1. Company Introduction

Chinese Name: 深圳市舒马特科技有限公司

English Name: Shenzhen Shumatt Technology Co., Ltd

Mob Phone/WeChat: +86-13410541523

HK Telephone: +852-67653519
Telephone: +86-755-23215133
Email: ruby@shumatt.com
Website: www.shumatt.net

Shenzhen Office: 11-12, Floor 14, Building 13, Qinchengda Building, Exit A, Honglang North Subway Station,

Bao'an District, Shenzhen, China's Mainland

Shenzhen Office: Room 428-430, Building B, Huafeng Zhigu Technology Industrial Park, Exit B, Fuyong Metro

Station, Bao'an District, Shenzhen, China's Mainland

Hong Kong Office: Jianfa Street Industrial Zone, Tuen Mun, New Territories, Hong Kong, China

After-sales Service Address: Please contact our salesmen to obtain and provide the corresponding product

maintenance reasons (Reference: <u>1.8. F00VX40023 Injector Warranty Instructions</u>)

5.2. Sales-men's Contact Information

No.	Name	Name WeChat/ WhatsApp Email		Facebook	YouTube
1	Ruby	+86-13410541523	ruby@shumatt.com	Hison Li	Hison Li
2 n 3000	lvy	+86-18025309821	sales@shumatt.com	Ivy Shumatt	Shumatt IVY
3	Rebecca	+86-18025349821	sales01@shumatt.com	Rebecca SHUMATT	SHUMATT Rebecca
4	Janny	+86-18028749821	sales02@shumatt.com	Janny shumatt	Janny Shumatt
.5,00°°°	Sam	+86-13316859821	Sales8@shumatt.com	Shumatt Sam	Sam Shumatt
6	Natalie	+86- 18938945856	sales15@shumatt.com	Shumatt Natalie	Lin Natalie
7	Ada	+86-1342286353	sales5@shumatt.com	Shumatt Ada	Ada Shumatt
8	Hison Li	+86-18318811871	web@shumatt.com	Hison Li	Hison Li
9	Mecca	+86-18938948618	sales11@shumatt.com	Shumatt Mecca	Shumatt Mecca
10	Eric	+86 18319033618	sales3@shumatt.com		
11	Wayne (Joaquín en español)	+86-13316959821	wayne@shumatt.com	shumattwayne	Wayne Shumatt

Mob/Whatsapp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u>

© 2022 深圳市舒马特科技有限公司

Website: www.shumatt.com




Sylvia +86 18312499884 sales6@shumatt.com

Visit http://shumatt.com to obtain the latest information of sales-men

PS: Shumatt's sales-men's emails are all end with @shumatt.com

6. Copyright Statement

The copyright of any contents in "F00VX40023 Injector Nozzle Technical File" (including but not limited to parameters, data, text, charts, images, sounds or videos, etc.) provided in belong to Shenzhen Shumatt Technology Co., Ltd. Without the prior written permission of Shenzhen Shumatt Technology Co., Ltd., you are not allowed to modify any contents in "F00VX40023 Injector Nozzle Technical File" in any way. At the same time, any conditions to spread, re-post or display the contents in "F00VX40023 Injector Nozzle Technical File" should indicate that the cited article is from Shenzhen Shumatt Technology Co., Ltd., Any actions failure to follow above conditions to use "F00VX40023 Injector Nozzle Technical File" will violate the "Copyright Law of the People's Republic of China" and other laws and regulations that relevant international conventions.

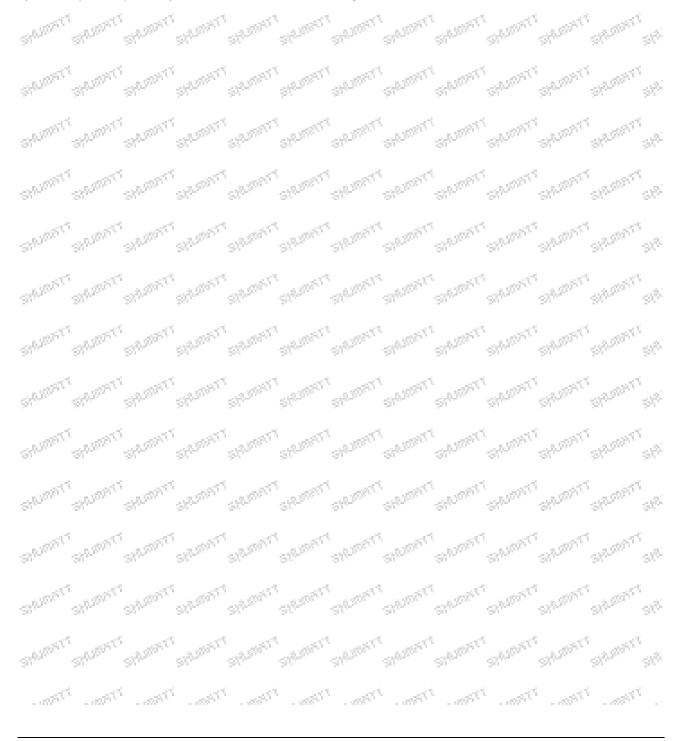

Mob/Whatsapp: +86 13410541523 Tel: +8675523215133

© 2022 深圳市舒马特科技有限公司

Email: ruby@shumatt.com

Website: www.shumatt.com